


HANDSET BUTTON EXPLANATION

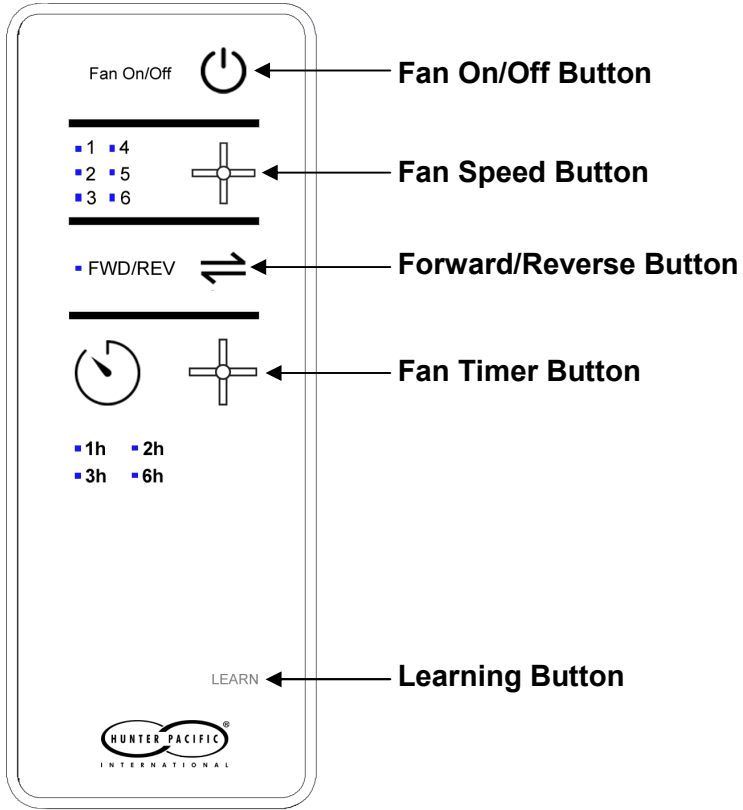

The diagram shows a vertical handset with the following buttons and callouts:

- Fan On/Off Button:** A power button icon with the text "Fan On/Off" to its left.
- Fan Speed Button:** A four-way directional pad with six small square LEDs (1-6) to its left. The LEDs are arranged in two columns: 1, 2, 3 on the left and 4, 5, 6 on the right.
- Forward/Reverse Button:** A button with two arrows pointing in opposite directions and the text "FWD/REV" to its left.
- Fan Timer Button:** A clock face icon with a four-way directional pad to its right. Below the clock are four small square LEDs (1h, 2h, 3h, 6h) arranged in two columns.
- Learning Button:** A button with the word "LEARN" to its left.

The Hunter Pacific International logo is at the bottom of the handset.

To turn fan on press the **"Fan On/Off"** button and the fan will start and settle on the speed it was last used.

The six LED lights on the remote control display the fans current speed. Low speed is indicated by the 1st LED on the left of the handset. High speed is shown by the 6th LED.

Use **"FWD/REV"** anytime to change direction. Depending on speed it may take a little while for the fan to stop and change direction.

The **"Fan Timer"** function turns the fan off after the preset time has elapsed. To cancel timer function turn the fan off.



1. Any modification or attempt to directly wire the fan without a control module will void warranty unless those modifications are authorised.
2. DO NOT USE ELECTRONIC OR DIMMER TYPE SPEED CONTROLLERS.

CONTROL MODULE AND HANDSET PROGRAMMING EXPLANATION

MAKE SURE THE WALL SWITCH IS ON OR REMOTE CONTROL WILL NOT WORK


Handset Battery Installation/Replacement

Open the battery compartment by sliding the hatch downwards. Gently press the grooved section inwards to disengage latch. UNWRAP THE PLASTIC FROM AROUND NEW BATTERIES. Observe polarity and make sure battery sits properly in recess. Slide hatch back into place.

How To Add a New or Replacement Handset

The receiver can learn the identification code for a new handset using the following procedure:

- A. Turn off the MAINS POWER to the Control Module for 30 seconds
- B. Toggle the MAINS POWER ON and OFF as follows (each ON and OFF must be 2 secs).

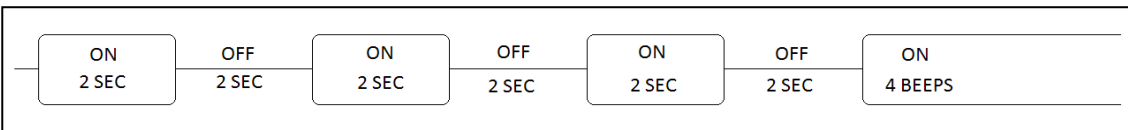

- C. The Control Module will beep four times when it enters program mode. The duration of each on period and each off period must be 2 seconds. Depending on how accurate the 2 second periods are the Control Module should enter program mode after 3 or 4 cycles of turning the power on/off. If the 2 second periods are too short or too long simply keep toggling power until it does enter program mode.

IMPORTANT: IF MULTIPLE FANS ARE CONNECTED TO THE SAME FINAL CIRCUIT OR FED FROM THE SAME POWER SWITCH THEN PROGRAM THE CONTROL MODULE BY PLUGGING IT INTO A GPO/POWER POINT BEFORE INSTALLATION.

NOTE: THE MAINS POWER TO THE CONTROL MODULE MUST BE SWITCHED ON-OFF VIA AN EXTERNAL SWITCH. **NOT** THE BUTTONS ON THE HANDSET.

- D. Move the new handset to within 2 metres of the receiver and press "LEARN" button on the handset to add it, or the OFF button to erase all handsets from control module memory (without any handsets the module will beep 4 times when powered)

SEE TERMS AND CONDITIONS OF WARRANTY. YOU WILL BE CHARGED A SERVICE FEE IF THE PRODUCT IS NOT DEFECTIVE OR IS DAMAGED BY POWER SURGES, LIGHTNING, WEATHER, MISUSE/ABUSE AND SIMILAR SITUATIONS. ALL INSTALLATION INSTRUCTIONS MUST BE FOLLOWED.



1. Any modification or attempt to directly wire the fan without a control module will void warranty unless those modifications are authorised.
2. DO NOT USE ELECTRONIC OR DIMMER TYPE SPEED CONTROLLERS.